

1




2

CAUTION: Before assembling, clear any loose debris from the ground surface to prevent scratching the tabletop.



3

Flip upside down and attach the micro-adjust feet to all 4 corners.

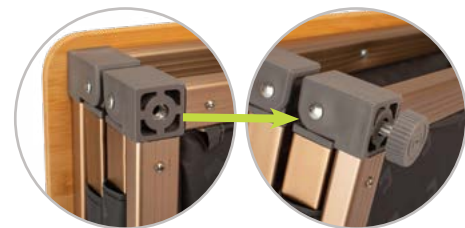

4

Lay the table flat on its feet and extend the panel.



5

Pull the leg outwards until it clicks into place. Repeat on all 4 legs. Be aware of pinch points!



6

Fully extended.



7


Open and fold the doors before securing it with the velcro straps.

Note: Four shelves inside.



8

Place two shelves on the top fabric holder.

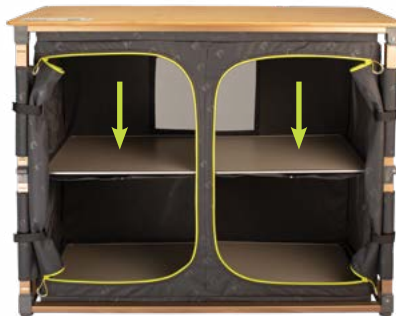


9

Ready to use.



A

Feature: Utensil rack with detachable hooks or used as a bin holder.

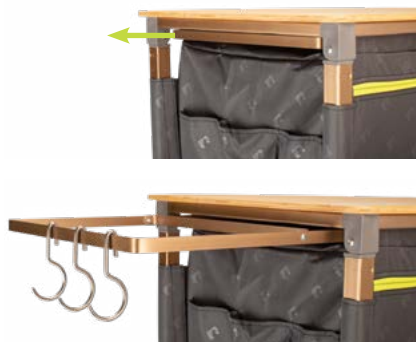

B

Feature: Eco Kitchen Kit attachment.



C

Feature: Storage pockets.



D

Feature: To store tall items, simply unzip the middle shelf to create a taller cupboard.



PINCH POINTS

Keep fingers clear when folding.
Follow all assembly instructions.




1



2

Remove the two top shelves, and store away into the bottom shelves.

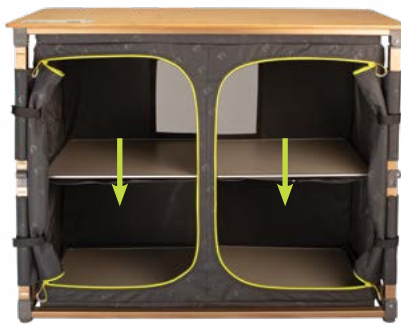

3



4

Close the doors, before folding away.



5

Store the hooks away and push the rack in.

IMPORTANT: Ensure to push the utility rack in before folding to prevent damage to the legs when folded.



6

Push the leg lock inwards to collapse. Repeat on all 4 legs.

Be aware of pinch points!



7



8

Flatten and store back in the bag.



9



2 Year Limited Warranty

We take pride in the quality and design of every ZEMPIRE table or cupboard, that's why our TABLES & CUPBOARDS come with a strong guarantee designed to protect you as our valued customer. ZEMPIRE will repair or replace this product, should it fail due to faulty materials or manufacture for a period of 2 years from the date of purchase.

For a full explanation of what is covered under this warranty please refer to our website www.zempire.co.nz/warranty.

Care & Safety information:

- Do not stand on your cupboard.
- Be gentle with zips; always use two hands to close the zip; do not force it if zip gets caught.
- Do not use near open flame.
- Clean thoroughly after each use. Wash by hand with warm water and a soft towel or sponge.
- Do not use harsh cleaning chemicals.
- Leave the cupboard to dry out completely before putting it away.
- Do not keep the cupboard in direct sunlight or leave it in the rain.
- Store away from chemicals and moisture.
- In case re-coating is required; sand lightly with an extra fine-grit sandpaper. Reseal surface with a few coats of wood sealer product for ample water protection.