CAUTION

- Use only on a flat and stable surface.
- Ensure all latches are secure before use.
- Ensure the waste tank is assembled correctly and the end cap is attached securely.
- · Do not exceed the weight limit of 200kg.
- · Do not lean on the seat cover.
- Do not disassemble the piston pump.

COMPONENTS



- 1. Seat Cover
- 2. Seat
- 3. Piston Pump
- 4. Cap For Freshwater Holding Tank
- **5.** Freshwater Holding Tank
- 6. Latch Assembly
- 7. Waste Holding Tank Cap
- 8. Waste Holding Tank
- 9. Water Level Indicator
- **10.** Slide Valve Assembly
- 11. Air Release Button

 
STORAGE

- · Avoid direct sunlight and high temperatures.
- Suitable for use in temperatures under 50°C.
- Lubricate Slide-Valve periodically with lubrication such as Vaseline.
- Ensure both tanks are clean before storing.



Camp Rinse & Camp Green

Reduce odours and make cleaning easier. Available in both 500ml and 1000ml bottles.

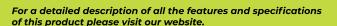

WWW.ZEMPIRECAMPING.COM



USER MANUAL AND CARE INSTRUCTIONS





USE METHOD

1. Fill the freshwater tank

Add 10 Litres of clean water to the freshwater tank. Add **CAMP RINSE** detergent.



2. Open the slide valve (flush valve)

Changes in weather and elevation can cause pressure to build up in the waste holding tank. To avoid splashing, press the exhaust-valve button before opening the slide-valve.





Slide valve

Exhaust valve

3. Open the seat cover

CAUTION: Do not lean on the seat cover.



4. Lift and press the flush pump until the toilet bowl is clean

The freshwater tank provides up to 60 flushes at full capacity. Twin nozzles provide better coverage and a more efficient clean.



5. Close the slide valve

Waste levels can be monitored using the colour-coded gauge found on the front of the waste holding tank.







Empty

Half Full

Full

WASTE TREATMENT

1. Make sure the slide valve is closed

Ensure that the slide-valve handle is pushed in and that the top inlet is completely sealed.



2. Release the side latches



Pull out top





Press downwards



Separate latch from tank

3. Separate the tanks

Separate the freshwater tank and the waste holding tank by opening the side latches. Stand the waste holding tank upright and carry to a permanent toilet facility or dump station.



4. Push the exhaust valve before unscrewing the end cap

Changes in weather and elevation can cause pressure to build up in the waste holding tank. To avoid splashing, press the exhaust-valve button before opening the end cap.



5. Empty the waste holding tank

Holding both sides of the tank, tip out the waste while pressing the exhaust-valve button.

6. Rinse and add CAMP GREEN

Rinse the waste holding tank with clean water and add CAMP GREEN before securing the end cap and reassembling the toilet.

